


KSJTM

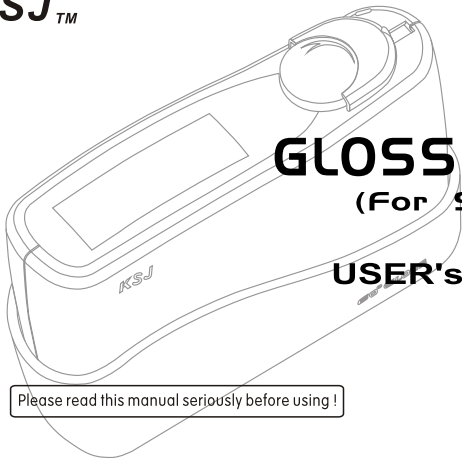

GLOSSMETER

(For Stone)

USER's MANUAL

Model: MG6-SS

Please read this manual seriously before using !

CONTENTS

| | |
|----------------------------|----|
| Specifications | 3 |
| Structure | 5 |
| Operation | 9 |
| Maintenance | 12 |
| Packing List | 13 |
| Warranty and Support | 14 |

The MG6-SS glossmeters are designed and manufactured according to ISO 2813 and GB 9754. The meters are also compatible with the standards of GB/T 13891. The technical parameters conform with JJG 696-2002. The gloss values can be traced to the those of the National Primary Standards in SIMT in the P. R. China.

Application for:

Stone materials, such as marble, granite, etc.

SPECIFICATIONS <A>


| Specifications | Unit | MG6-SS 3 Digits |
|----------------------|------|--------------------|
| Reading Range | GU | 0 ~ 199 |
| Measuring Range | GU | 0 ~ 120 |
| Resolution | GU | 1 |
| Deviation | GU | ± 2 |
| Zero-point Deviation | GU | 1 |
| Stability | GU | 1 |
| Measuring Area | mm | 20×10 |
| Incidence Angle | DEG | 60 ° |

**SPECIFICATIONS **

| Specifications | Unit | MG6-SS 3 Digits |
|----------------|-----------------|--|
| Power Supply | | One AA-size battery, 1.2V ~ 1.5V, Rechargeable or alkaline. |
| Consumption | | It's different to battery types. An alkaline battery may last the meter to work more than 58 hrs. |
| Main Volume | mm ³ | 123 × 65 × 38 |
| Main Weight | g | 300 |

STRUCTURE <A>

◆FRONT

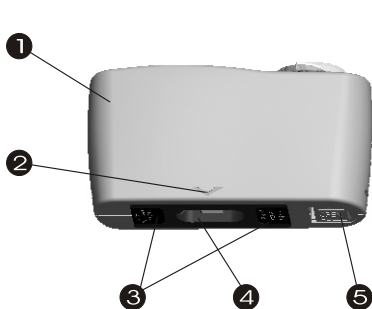

- ① Front Cover
- ② Measuring Mark
- ③ Info Labels
- ④ Measurement Aperture
- ⑤ Battery Cabin

STRUCTURE


◆ REAR

- ⑥ Display Screen
- ⑦ Calibration Knob
- ⑧ Knob Protector
- ⑨ On/Off Button



STRUCTURE <C>

◆ Holder With Calibration Tile

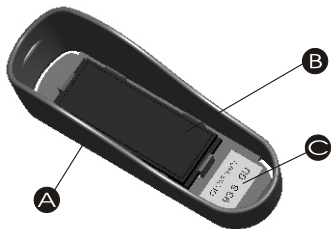

- A** Holder
- B** Calibration Tile (Working Standard)
- C** Gloss Value Label

STRUCTURE <D>


◆ Battery Changing

D Front Cover

E Cabin Cover

F AA-size Battery

G Rear Cover

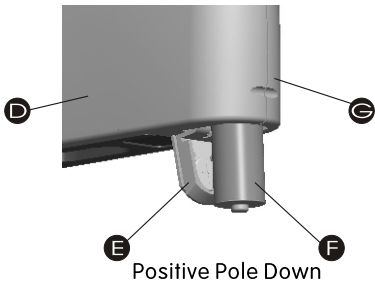

OPERATION

■ Power ON/OFF

Push On/Off Button to turn on the meter. To turn off just push it again.

■ Calibration

Turn on the meter and turn the Calibration Knob to adjust the reading to the correct value that is labeled in the holder.

☆ The main must be located in the holder properly.

■ Measurement

Remove the holder and lay the Measuring Aperture just against the position that you want to measure. The gloss value will be shown on the Display Screen.

☆ For an accurate result it is necessary to recalibrate the meter during working.

OPERATION

■ Checking

After calibration, set the Measurement Aperture on the Checking Tile (Spare Working Standard). The deviation between the shown value and the labeled value should be less than or equal to 1 GU. If the deviation goes beyond this scope, it's shown that the certified gloss values of the working standards may be changed. Thus the gloss values should be certified again.

- ☆ Check only when the meter is used for a long period, or the measurement result is doubtful. It is not necessary to check for every measurement.

OPERATION

■ Precautions

- ▲ While measuring, the lens in the Measurement Aperture, the surface of the Working Standards and the measured position, etc should be kept clean. If those surfaces have dust, steam or filth, they must be cleaned lightly with lens paper or a soft cloth dipped absolute ethanol.
- ▲ Calibrating, measuring and checking should be carried out at the same ambient temperature. Too big difference in temperature would bring about the numerical excursion.
- ▲ While measuring keep environment light from directly irradiating into the Measurement Aperture.
- ▲ When the battery run out, the symbol of "bat" will appear on the Display Screen, replace the old battery with a new one at once.
- ▲ During measuring recalibrate the meter.

MAINTENANCE

■ Maintenance

- ▲ The whole set of the meter should be kept in dry, ventilative and non-corrosive environment.
- ▲ If the meter is not in use, please put into the holder.
- ▲ Keep the surface of the working standards clean, both the Calibration Tile and the Checking Tile.
- ▲ Remove the battery to prevent corrosion for a long period store.
- ▲ After measurement, the meter should be turned off at once in order to save the energy of battery.
- ▲ Although the plastic parts of the meter are resistant to many solvents, you should use a soft cloth dipped water or ethanol for cleaning.
- ▲ For environment dispose the wasted batteries properly.

PACKING LIST

| | | |
|---|---------------|---------|
| ◆ Main | Model: MG6-SS | 1 set |
| ◆ Holder with Calibrating Tile (Working Standard) | | 1 set |
| ◆ Checking Tile (Spare Working Standard) | | 1 piece |
| ◆ AA-Size Alkaline Battery | | 1 piece |
| ◆ User Manual | | 1 piece |
| ◆ Inspection Certification | | 1 piece |
| ◆ Guarantee Card | | 1 piece |

Limited Warranty And Technical Support

- ★ The limited warranty period is one year commencing on the date of purchase. If your gloss meter needs service, carry it to the local reseller or contact us at **<http://www.ksj.cn>** for repair.
- ★ We provide spare parts anytime for distributors and customers.
- ★ The inquiries on the gloss measurement may be directed to **support@ksj.cn**
- ★ We also provide glossmeter customizing for a special application.

Note:

- ☆ The meter should not be taken down at will in order to avoid precision destroying and causing maintaining difficulty.
- ☆ If the breakdown is caused by taking-down or inappropriate use, we reserve the rights not to guarantee it free in repair.

NOTE FOR MAINTENANCE

| Date | Description | Signature |
|------|-------------|-----------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Made in China

KSJ Institute of Photoelectrical Instruments

Add.: The Past APIQ Building, Jinshan Xincun,
Quanzhou, Fujian 362000,
China

Tel.: 0086-595 - 22391040

Fax: 0086-595 - 22391048

Website: www.ksj.cn

www.glossmeter.cn

E-mail: sales@ksj.cn

keshijia@public.qz.fj.cn