


# User Guide



## Model 380360 Insulation Tester / Megohmmeter

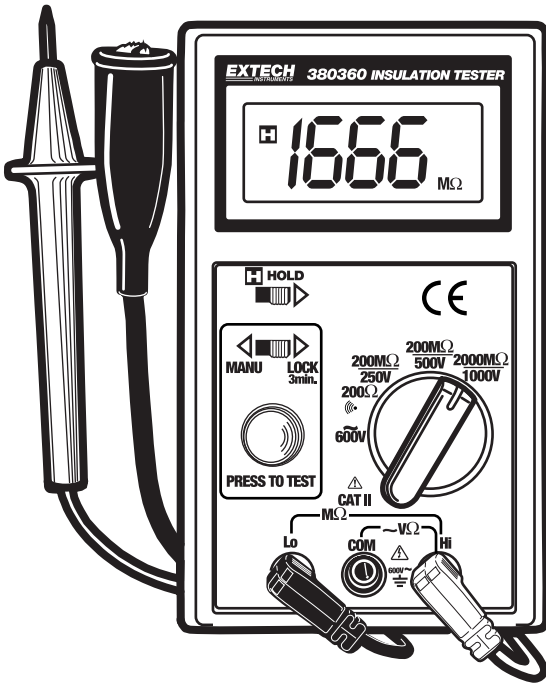

### ***Introduction***

Congratulations on your purchase of Extech's Insulation Tester/Megohmmeter. The Model 380360 provides three test ranges plus continuity and an AC voltage test. A handy 3-minute test lock feature and a data hold switch are also included. This professional meter, with proper care, will provide years of reliable service.

## Safety

---

1. Circuits under test must be de-energized and isolated before connections are made (except for voltage measurements).
2. Circuit connections must not be touched during a test. Use extreme caution when working near bare conductors and bus bars. Accidental contact with conductors could result in electrical shock.
3. Use caution when working near voltages above 60VDC or 30VACrms.
4. After insulation tests, capacitors must be discharged.
5. Test leads (including alligator clips) must be in good working order, clean and without broken or cracked insulation.
6. When servicing, use only specified replacement parts.

### International Safety Symbols



Caution, refer to this manual before using this meter



Dangerous Voltages



Meter is protected throughout by double or reinforced insulation

## Specifications

---

### General specifications

Display	0.65" 3-1/2 digit (2000 count) LCD
Sampling rate	2.5 readings per second
Test ranges	2000M $\Omega$ /1000VDC, 200M $\Omega$ /500VDC, 200M $\Omega$ /250VDC
AC Voltage range	600VAC
Resistance range	200 $\Omega$
Over range indicator	'1____' displayed
Zero adjust	Automatic
Low battery indicator	'BT' symbol displayed when battery voltage is low
Power source	Six (6) 1.5 'AA' batteries
Power consumption	20 to 95mA (depending upon function)
Operating conditions	32 to 104°F (0 to 40°C); 80% RH
Dimensions	6.5 x 3.9 x 2.2" (165 x 100 x 57mm)
Weight	1.1 lbs (500g)

## Range Specifications

Accuracies are specified as % reading + digits at 23°C < 80% RH

### RESISTANCE

Range	Res.	Accuracy	Max. open circuit Volt	Overload Protect.
200Ω	0.1 Ω	±1% + 2d	3.3V	500Vrms

### CONTINUITY

Range	Res.	Audible tone	Max. open circuit Volt	Overload Protect.
200Ω	0.1Ω	< 100Ω	3.3V	500Vrms

### AC VOLTAGE

Range	Res.	Accuracy	Input impedance	Overload Protect.
600VAC	1V	±0.8% + 3d	10MΩ	750Vrms


### MEGOHMMETER RANGES

Range	Res.	Accuracy	Terminal voltage
200MΩ / 250VDC	0.1MΩ	±3% + 5d	250V + 10% ~ -0%
200MΩ / 500VDC			500V + 10% ~ -0%
0 to 1000MΩ / 1000VDC	1MΩ	±5% + 5d	1000V + 10% ~ -0%
1000 to 2000MΩ / 1000VDC			

Range	Test Current / Load	Short circuit Current
200MΩ / 250VDC	250KΩ	< 1.5mA
200MΩ / 500VDC	500KΩ	
0 to 1000MΩ / 1000VDC	1MΩ	
1000 to 2000MΩ / 1000VDC		

# Meter Description

1. LCD Display
2. Rotary function switch
3. Data hold switch
4. Test button
5. Manual / Lock select switch
6. HI input terminal
7. COM input terminal
8. LO input terminal
9. Positive test lead
10. Negative test lead

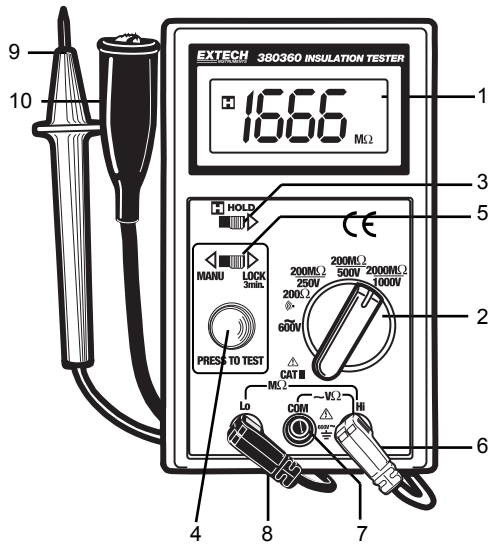

## Warning

Ensure that the circuit under test does not include components that can be damaged by 1000VDC; such devices include power factor correction capacitors, low voltage mineral insulated cables, electronic light dimmers, and ballasts/starters for fluorescent lamps.

# Operation

## Connecting Test Leads

For the MΩ range, connect the red test lead to the HI input terminal and the black test lead to the LO input terminal. For the 200Ω and 600VAC functions, connect the red test lead to the HI (right) input jack and the black lead to the COM (center) jack.

## Test Lead Check


1. Connect the red test lead to the HI input terminal; black lead to the COM terminal.
2. Set the rotary switch to the 200Ω range.
3. Set the HOLD switch to the left off position and the MANU/LOCK switch to the MANUAL position.
4. Touch the test lead tips together.
5. Press the red TEST button.
6. Resistance should read less than 1Ω and the audio tone should sound.
7. With the leads not touching, the display should read 1\_\_ indicating over-range.
8. Readings displayed other than the readings described above are indicative of a test lead problem. The test leads must be replaced before using the meter. Failure to do so could result in damage to equipment and electrical shock.



## Insulation Resistance Measurements (Megohmmeter Tests)

**Warning:** Do not perform Insulation Resistance measurements if AC Voltage is present on the device under test.

1. Connect the red test lead to the HI input terminal; black lead to the LO terminal.
2. Set the HOLD switch to the left off position and the MANU/LOCK switch to the MANUAL position.
3. Set the rotary switch to the desired test voltage (250V, 500V, or 1000V).
4. Connect the tips of the test leads to the equipment under test.
5. Press and hold the TEST button. Release the test button to stop the test.
6. Read the measurement value on the LCD display.

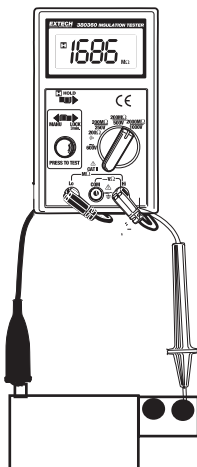

### 3-Minute Test Lock

For hands-free operation, use the TEST LOCK feature.

1. Connect the red test lead to the HI input terminal; black lead to the LO terminal
2. Set the rotary switch to the desired voltage test position (250V, 500V, or 1000V).
3. Connect the tips of the test leads to the equipment under test.
4. Set the MANU/LOCK switch to the LOCK position.
5. Press and release the red TEST button. A 3-minute continuous test will begin. The red TEST button can be pressed at any time to end the test. If the TEST button is not pressed, the meter automatically stops the test after 3 minutes.

### Notes on IR (Megohmmeter) testing:

1. The maximum measurement range for the 380360 is  $2000\text{M}\Omega$  ( $2\text{G}\Omega$ ). Frequently, insulation resistance will exceed this value. When this happens, the display will indicate  $1 \text{ M}\Omega$ , meaning the resistance is very high and the insulation being tested is good.
2. If the device being tested is highly capacitive, the display will indicate an increasing resistance value over time. Always wait until the reading has stabilized before recording the value.

## Low Resistance and Audible Continuity Tests

### WARNING

Do not run this test unless ACV = 0. Do not use this mode to check diodes.

1. Set the Rotary switch to the  $200\Omega$  (•)) position.
2. Connect the red test lead to the HI input terminal; black lead to the COM terminal.
3. Connect the tips of the test leads to both ends of the circuit under test.
4. Press the red TEST button and read the resistance on the LCD.
5. When the resistance of a circuit is less than approx.  $100\Omega$  the audible tone will sound.

## AC Voltage Tests

1. Set the Rotary switch to the red 600V position.
2. Connect the red test lead to the HI terminal and the black test lead to the COM terminal.
3. Connect the other end of the test leads to the circuit under test.
4. Read the voltage value on the LCD.

## Data Hold Function

The Data Hold function freezes the displayed reading. Move the HOLD switch to the rightmost position to freeze the displayed reading. The 'H' will appear on left side of the display when the meter is in the Data Hold mode. Move the switch to the left position to exit the Data Hold mode (the 'H' indicator will switch off).

## Maintenance

---

### Battery Replacement

When the low battery symbol appears (BT) on the LCD the six 1.5V 'AA' batteries must be replaced.

1. Turn the meter is off and remove the test leads
2. Remove the Phillips head screw on the rear of the meter
3. Remove the battery compartment cover
4. Replace the batteries observing polarity
5. Affix the rear cover and secure the rear screw


### Cleaning

Periodically wipe the case with a dry cloth. Do not use solvents or abrasives to clean this instrument.

# Applications

## Measuring Power Tools and Small Appliances


This section applies to any device under test that uses a line cord. For double insulated power tools, the meter's leads should be connected to the device's housing (chuck, blade, etc.) and the ground of the power cord. Refer to the diagram.

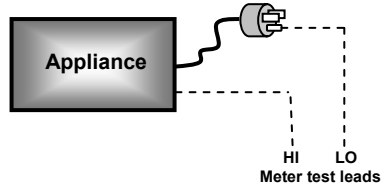

## Testing AC Motors

Disconnect the motor from the line by disconnecting the wires from the motor terminals or opening the mains switch.

If the mains switch is opened, and the motor also has a motor-starter, then the starter must be held in the ON position. With the mains switch opened, the measured resistance will include the resistance of the motor wire and all other components between the motor and the main switch. If a weakness is indicated, the motor and other components should be checked individually. If the motor is disconnected at the motor terminals, connect one meter lead to the grounded motor housing and the other lead to one of the motor leads. Refer to diagram at below.

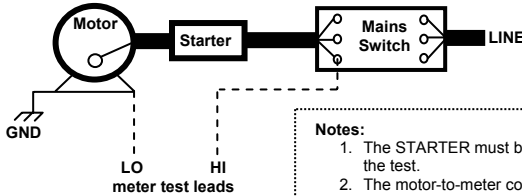

### Notes:


1. The STARTER must be in the ON position during the test.
2. The motor-to-meter connection must be made to the motor housing (ground).
3. The meter-to-main switch connection must be to the motor side of the main switch as shown.

## Testing DC Motors

1. Disconnect the motor from the line.
2. To test the brush rigging, field coils and armature, connect one meter lead to the grounded motor housing and the other lead to the brush on the commutator.
3. If the resistance measurement indicates a weakness, raise the brushes off of the commutator and separately test the armature, field coils and brush rigging (one at a time). Leave one lead connected to the grounded motor housing while testing the motor components. This also applies to DC Generators.

## Testing Cables

1. Disconnect the cable under test from the line.
2. Disconnect the opposite end of the cable to avoid errors as a result of leakage from other equipment.
3. Check each conductor to ground and/or lead sheath by connecting one meter lead to ground and/or lead sheath and the other meter lead to each of the conductors in turn.
4. Check insulation resistance between conductors by connecting meter leads to conductors in pairs. Refer to diagram at right. In the diagram, note that the 3-conductor cable has two wires shorted to the ground shield. This two-wire/shield connection is then connected to one side of the meter. The remaining conductor is connected to the other side of the meter.

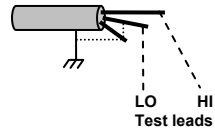

## Application Note for Large Installations

In large wiring installations where the insulation of outlets is being tested, more than one insulation resistance measurement may have to be made to take into account parallel resistances. Divide large systems into subgroups and test subgroups individually. Also, in large installations, the capacitance of the insulation will be high, thereby taking longer to charge when being tested. Care must be taken not to finish a measurement until the insulation capacitance is fully charged (a steady, stable reading is an indication that this is the case). Be careful not to turn the range switch while the test button is pressed.

## Repair and Calibration

---

Extech offers repair and calibration services for the products we sell. Extech also provides NIST certification for most products. Call the Customer Service Department for information on calibration services available for this product. Extech recommends that annual calibrations be performed to verify meter performance and accuracy.



Support Hotline (781) 890-7440

Tech support: Ext. 200; Email: [support@extech.com](mailto:support@extech.com)

Repair>Returns: Ext. 210; Email: [repair@extech.com](mailto:repair@extech.com)

Website: [www.extech.com](http://www.extech.com)

## Warranty

---

EXTECH INSTRUMENTS CORPORATION warrants this instrument to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies on sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department at (781) 890-7440 ext. 210 for authorization or visit our website at [www.extech.com](http://www.extech.com) (click on 'Contact Extech' and go to 'Service Department' to request an RA number). A Return Authorization (RA) number must be issued before any product is returned to Extech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Extech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Extech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

**Copyright © 2003 Extech Instruments Corporation. All rights reserved  
including the right of reproduction in whole or in part in any form.**