

User's Guide

EXTECH
INSTRUMENTS

Model DVA30 AC Voltage and Current Detector

Non-Contact Voltage Detection


Non-Contact Current Detection

Identify "hot" conductors and terminals

Trace current carrying conductors behind walls and in conduit

Sensitivity adjust to "home" in on conductors

Locate hidden wires

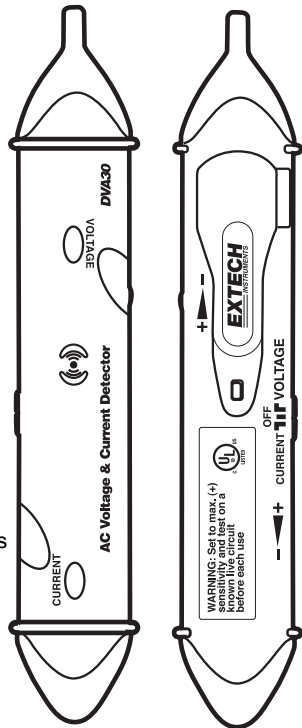

WARRANTY

EXTECH INSTRUMENTS CORPORATION warrants this instrument to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies on sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department at (781) 890-7440 ext. 210 for authorization or visit our website at www.extech.com (click on 'Contact Extech' and go to 'Service Department' to request an RA number). A Return Authorization (RA) number must be issued before any product is returned to Extech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Extech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Extech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Copyright © 2002 Extech Instruments Corporation.

All rights reserved including the right of reproduction in whole or in part in any form.

International Safety Symbols




This symbol, adjacent to another symbol or terminal, indicates that the user must refer to the manual for further information.



This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present

Safety Precautions

1. Improper use of this meter can cause damage, shock, injury or death. Read and understand this manual before use.
2. Secure any covers or battery doors before use.
3. Inspect the condition of the meter for any damage before use.
4. Remove the batteries from the meter if the meter is to be stored for long periods.

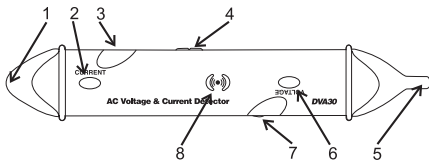

Tester Description

1. Current Sensor and LED
2. Current Detector "ON" LED
3. Current Detector Sensitivity adjustment
4. Current/Voltage/OFF function selector switch
5. Voltage Sensor and LED
6. Voltage Detector "ON" LED
7. Voltage Detector Sensitivity adjustment
8. Audible beeper

Specifications

Voltage detection	12V to 600VAC
Current sensitivity	200mA (0.2A) AC at 0.2"
Audible indication	Beeper (Voltage & Current)
Visible indication	Flashing LED (Voltage & Current)
Frequency range	50 to 500Hz
Operating Temperature	14 to 122°F (-10°C to 50°C)
Operating Humidity	< 80% RH
Altitude	< 2000m
Power supply	(4) LR44 batteries or equivalent
Weight	2.1 oz. (60g)
Dimensions	7.6 x 1.2 x 0.9" (192x31x24mm)
IEC 1010	Category III 600V
Indoor use	

Support Hotline (781) 890-7440


Tech support: Ext. 200; Email: support@extech.com Repair>Returns: Ext. 210;
Email: repair@extech.com Website: www.extech.com

Operation

WARNING: Risk of Electrocution. Before use, always test the Detector on a known live circuit to verify proper operation

VOLTAGE DETECTION


1. Slide the Function switch to the Voltage position.
2. The "VOLTAGE" LED will light. If the LED is dim or does not light, replace the batteries.
3. Set the Sensitivity adjustment to the max position.
4. If the detector begins to beep/flash, slowly turn the sensitivity down until the beep/flash stops.
5. Touch the detector voltage sensor to the hot conductor or insert into the hot side of the electrical outlet.
6. If AC voltage is present, the detector light will flash and the audible beeper will sound.
7. Adjust the sensitivity as needed to zero-in and identify the live conductor.



CURRENT DETECTION


NOTE: There must be a load on the circuit (current flow) for the current detection function to work.

1. Slide the Function switch to the Current position.
2. The "CURRENT" LED will light. If the LED is dim or does not light, replace the batteries.
3. Set the Sensitivity adjustment to the max position.
4. If the detector begins to beep/flash, slowly turn the sensitivity down until the beep/flash stops.
5. Move the detector current sensor near the current carrying conductor until the current tip flashes and beeper sounds.
6. Slowly reduce the sensitivity and reduce the distance between the sensor and conductor to zero-in and identify the conductor.




BATTERY REPLACEMENT

1. Turn power OFF
2. Slide the pocket clip down to expose the battery compartment.
3. Replace the four LR44 batteries and replace the pocket clip.

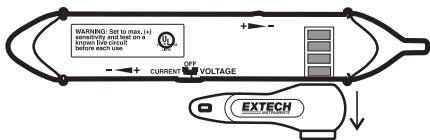


Typical Applications

VOLTAGE:




Locate breaks in wires

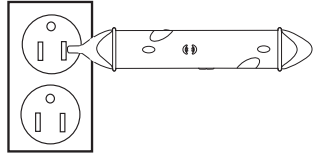


Identify hot terminal and polarity


CURRENT:

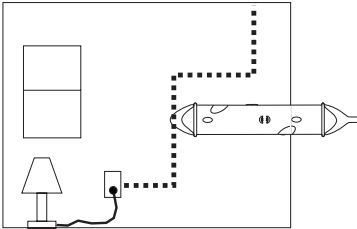


Trace current flow behind walls



Detect current flow through conduit or shielding

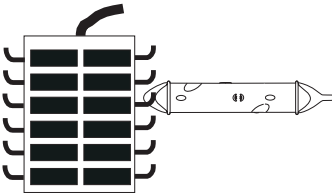

Compare current flow on branch circuits

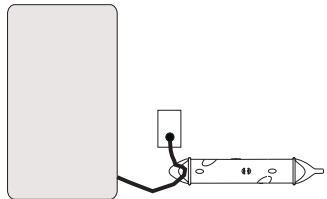

Check/Monitor current flow to appliances