

POWER QUALITY ANALYZER 3197

Power Measuring Instruments



The Most Comprehensive Portable PQA on The Market

Catch Power Quality Problems on the Fly...

Monitor for:

- ✓ Inrush Current
- ✓ Voltage Swells
- ✓ Voltage Dips
- ✓ Transient Overvoltage
- ✓ Interruptions



It's easy to route through complex wiring



Option ; AC FLEXIBLE CURRENT SENSOR
Thin cable type ; CR9667-01, CT9667-02

Measure and Record:

- ✓ Power and Power Factor
- ✓ Active/Reactive Energy
- ✓ Demand
- ✓ Load Changes
(with graph display!)
- ✓ Voltage and Current



POWER QUALITY ANALYZER

FORM	USB	2006/01/31
W3M	5A	200V
		60.02Hz
Dip	Inter.	Ext.
6	6	413
4 01/31 10:17:23 091 START		
5 01/31 10:18:35 398 TRANSIENT		
6 01/31 10:18:40.618 INRUSH		
7 01/31 10:18:41.517 INRUSH		
8 01/31 10:18:42.292 INRUSH		

...Before They Catch You!

CALRIGHT INSTRUMENTS

The Right Source For Your Test & Measurement Needs

8715 Mesa Point Terrace San Diego, CA 92154

Toll Free: 1.866.363.6634 Tel: 1.619.429.4545 Fax: 1.619.374.7012


Email: sales@calright.com <http://www.calright.com>

Measure Power and Power Quality on Single to Three-Phase Circuits Quickly and Effortlessly



P
Q
A

Feature 1: Vector Multimeter

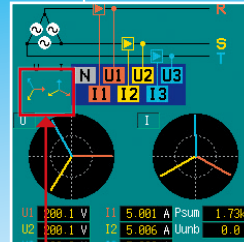

Use the wiring map, vector map and data monitor to check for proper wiring before taking measurements – don't miss out on important power data just because of minor wiring mistakes!

A quick glance at the correct vector map will show you if your wiring is correct

Feature 2: QuickSet

With QuickSet, all you have to do is just Set, Clamp and Measure!

Line frequency	:	Auto
Measurement Interval	:	Auto
Nominal Voltage	:	Auto
Event thresholds against nominal voltage	▶ Swell	: 110%
	▶ Dip	: 90%
	▶ Interruption	: 10%
	▶ Transient	: ON


Let QuickSet help you take care of all the time-consuming setup procedures. All you need to do is select your circuit, clamp sensor and range, and then let QuickSet do the rest of the work for you.

Testing Parameters Automatically Defined by QuickSet
Redefine Thresholds Easily with Intuitive Key Panel



Feature 3: Power & Power Quality


Get a crystal clear picture of the voltage fluctuation on all channels

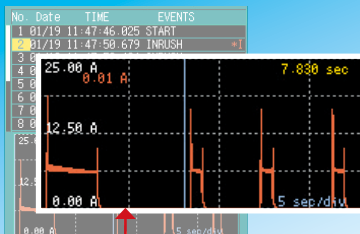

Measure all the necessary power parameters simultaneously

Check for sudden inrush during motor startup and diagnose breaker trips due to over current all on the same measurement interface. View RMS data for every half cycle over a 30 second period on a large graph display

All items are recorded as events so that a quick understanding can be obtained just by viewing the waveform

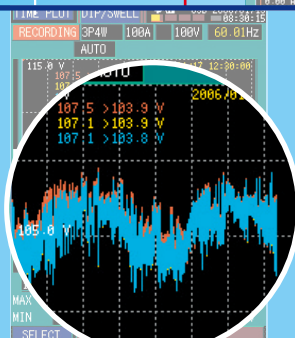

Power & Energy		Power Quality
✓ Voltage	✓ Demand	✓ Inrush Current
✓ Current	✓ Load Changes	✓ Voltage Swells
✓ Frequency	✓ THD(voltage)	✓ Voltage Dips
✓ Power and Power Factor	✓ Active/Reactive Energy	✓ Transient Overvoltage
✓ Voltage Fluctuation (dips and swells)		✓ Interruptions

Setting Up is as Easy as 1-2-3


1 Select your wiring



2 Select your clamp sensor

Use the **correct vector diagram** to check that your wiring is right before measuring, particularly useful when measuring 3-Phase circuits

Use **QuickSet** to automatically set the default values for line frequency, nominal voltage, interval, and power quality thresholds for event detection

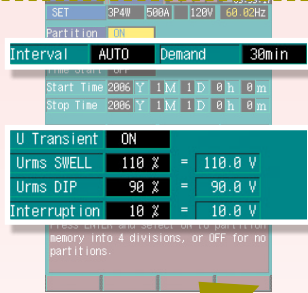

3 QuickSet



Toggle between screens to customize your measurement settings

Make detailed settings on how and when to measure, and customize your level of event detection as desired.



MEASURE

Obtain **real-time** moving data on voltage, current, power, and more!

Select from 5 Types of Color-coded Input Terminal Labels to Suit Your Application Region

Type	N	U1	U2	U3	Region
1	Black	Red	Yellow	Blue	Japan, U.K.
2	Blue	Orange	Black	Gray	EU (new)
3	Black	Yellow	Green	Red	China
4	Blue	Black	Red	White	EU (former)
5	White	Black	Red	Blue	N. America



Monitor Trends while Recording

Toggle between screens using **VIEW** key for instantaneous power data



One-touch switching between graph and numerical data

- Pull Strap Through for Ultimate Portability
- AC Adapter for Quick Recharge or Long Recordings
- USB Port for PC Compatibility
- Power Switch




- Convenient Stand for Hands-free Viewing

- Rugged and Durable Casing to withstand even the toughest environments and uses




WAVEFORM

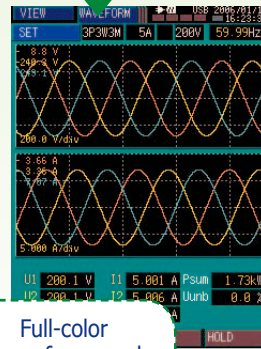

Full-color waveforms and RMS readings

RMS, Phase Angle and Lead and Lag


VECTOR

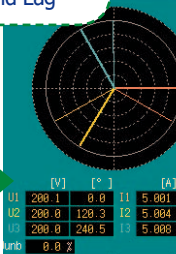

Record and Inspect (even while measuring)

Find the max, min and average values for any point using the **cursor function**


Auto-Data Compression Lets You Record for up to 125 Days

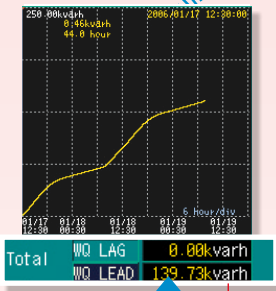

TIME PLOT

Toggle between the trend graphs for a complete analysis of the power situation


- ✓ Consumed & Regenerated **Active Power**
- ✓ Lag and Lead of **Reactive Power**

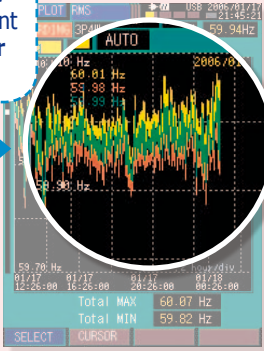

RMS

DIP/SWELL


Get a detailed picture during voltage anomalies - fluctuation range for **all 3 channels** are displayed

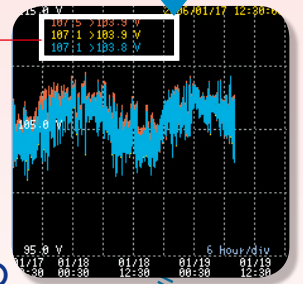

ENERGY

Demand Graph and maximum and average values displayed in **one window**

DEMAND

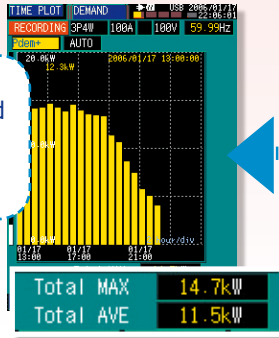


Display events AND their waveforms at the same time

Identify Power Quality Problems

WAVEFORM

Switch between voltage and current graphs, and zoom in on the time axis at the touch of a button

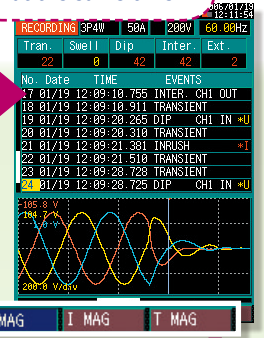

Toggle between events for a complete picture of the power anomaly

Store up to **50 Events**

DETAIL

Scroll down and select to display the finer details of any event


RMS

RMS voltage fluctuations such as swells and dips are clearly displayed at event detection

EVENT

Inrush current fluctuations are captured in RMS at a fast 10ms sampling rate and displayed across a 30-second window


"I" marks an Inrush Event

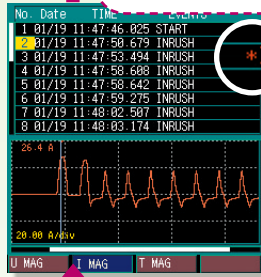

INRUSH


Record up to **20 graphs in internal memory**

Harmonic waveforms of voltage, current and active power to the 50th order

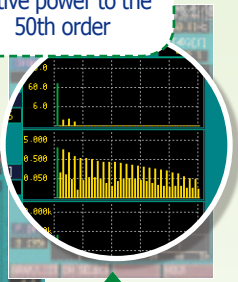

HARMONICS

DMM

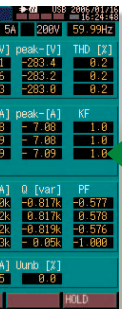

GRAP/LIST




Mobility, Portability Plus Convenient Data Transfer Right to Your PC

Feature 4: Bundled PC Application Software


Two Integrated Programs for Data Download and Viewing

Standard USB connection lets you download data at a snap, and immediately view your measurements with the DataView

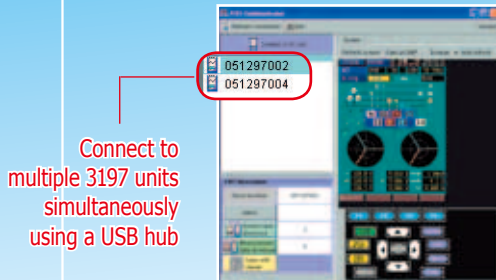

Connect to multiple 3197 units simultaneously using a USB hub

Open downloaded recordings with DataView to manage and process your captured power data on your PC.

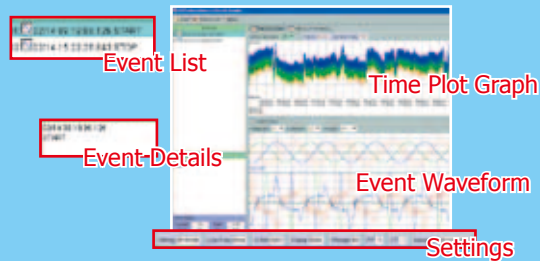

Feature 5: Compact Design Makes for Long Battery Life



6 Hours of Continuous Use on a Single Recharge

Non-volatile Ni-MH rechargeable battery pack keeps important measurement data in memory even after power is turned off.

A PQA that TRULY fits in the palm of your hand.

Standard 3197 Package Fulfills All the Requirements for Checking Voltage Anomalies



To measure current and power, please select one or more of our HIOKI Clamp On Sensors detailed on the back of this catalog.

Measurement Specifications		(Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
RMS Voltage and Current	True RMS (200 ms calculation)	
Voltage Accuracy	±0.3% rdg. ±0.2%f.s	
Current Accuracy	±0.3% rdg. ±0.2%f.s. + Clamp sensor accuracy	
Voltage (1/2) RMS Measurement	True RMS (one cycle calculation refreshed every half cycle)	
Accuracy	±0.3% rdg. ±0.2%f.s.	
Current (1/2) RMS Measurement	True RMS (half-cycle calculation, half-cycle voltage synchronized)	
Accuracy	±0.3% rdg. ±0.2%f.s. + Clamp sensor accuracy	
Frequency	Effective Measurement range: 45.00 to 66.00 Hz	
Accuracy	±0.01 Hz ±1 dgt. (when input is at least 10% of range)	
Active Power Accuracy (for consumption and regeneration)	±0.3% rdg. ±0.2% f.s. + clamp-on sensor accuracy (P.F.=1)	
Reactive Power Accuracy (for lags and leads)	±1 dgt. of calculation from each measurement value	
Effect of Power Factor	±1.0% rdg. (50 /60Hz, P.F.=0.5)	
Apparent Power Accuracy	±1 dgt. of calculation from each measurement value	
Power Factor and Displacement Power Factor Accuracy (leading phase indicated)	±1 dgt. of calculation from each measurement value (DPF calculated from phase difference between fundamental voltage and current waveforms)	
Active or Reactive Energy Consumption	Selectable between consumption, regeneration, lag and lead	
Accuracy	±1 dgt. applied to active and reactive power measurement accuracy	
Demand	Selectable between active or reactive power	
Accuracy	±1 dgt. applied to active and reactive power measurement accuracy	
Harmonic Analysis Orders	Up to 50th (2048 points/window, rectangular)	
Harmonic Voltage, Current and Power Accuracy (accuracy is not defined for harmonic power)	1st to 15th order ±0.5% rdg. ±0.2% f.s. 16th to 25th order ±1.0% rdg. ±0.3% f.s. 26th to 35th order ±2.0% rdg. ±0.3% f.s. 36th to 45th order ±3.0% rdg. ±0.3% f.s. 46th to 50th order ±4.0% rdg. ±0.3% f.s. (add accuracy of clamp sensor to harmonic current accuracy)	
Other Measurement Items	Peak Voltage and Current, K Factor, Voltage Unbalance Factor, Max/Min/Ave of Time Series	

Event Detection	
Voltage Swells (Rise), Voltage Dips (Drop), Interruptions	RMS value detected using voltage (1/2) measured every half cycle
Inrush Current	RMS value detected using current (1/2) every half cycle
Transient Overvoltage	Detection Range: 50 Vrms (±70.7 Vpeak equiv.) or more, 10 to 100 kHz
Timer Detection	Detect events at preset intervals selectable from OFF, 1, 5, 15 or 30 minutes; 1, 2 or 12 hours; or 1 day
Manual Detection	Detect events when keys are pressed
Thresholds	Set to OFF or to specified value, except for detection of transient overvoltages. (Waveform recording not available for transients.)
Event Recording Lengths	
Waveform	20ms before detection + 200ms upon detection + 30ms after detection
Event voltage fluctuation graph	0.5s before + 2.5s after detection
Inrush current graph	0.5s before + 29.5s after detection
Maximum Number of Recordable Events	50 event waveforms, 20 event voltage fluctuation graphs, 1 inrush current graph, 1000 event counts

Input Specifications																	
Wiring Configurations	Single-phase 2-wire (1P2W), single-phase 3-wire (1P3W), three-phase 3-wire (3P3W2M and 3P3W3M), three-phase four-wire (3P4W and 3P4W2.5E)																
Measurement Line frequency	Auto-select (50/60 Hz)																
Maximum Allowable Input Voltage	Voltage input terminal: 780 V AC (1103 Vpeak) Current input terminal: 1.7 V AC (2.4 Vpeak)																
Maximum Rated Voltage to Ground	Voltage input terminal: CATIII 600 V AC, CATIV 300 V AC (50/60 Hz) Current input terminal: per clamp-on sensors used																
Measurement Method	Simultaneous digital sampling of voltage and current (sampling frequency: 10.24 kHz per channel)																
Voltage Measurement Range	600.0V (Crest factor 2 or less)																
Current Measurement Range: Manual ranging according to clamp sensor (Crest factor 3 or less)	<table border="1"> <thead> <tr> <th>Clamp Sensor</th> <th>Range</th> <th>Clamp Sensor</th> <th>Range</th> </tr> </thead> <tbody> <tr> <td>9657-10, 9675</td> <td>500.0 mA/5.000 A</td> <td>9661, CT9667 (500A)</td> <td>50.00 A/500.0 A</td> </tr> <tr> <td>9694, 9695-02</td> <td>5.000 A/50.000 A</td> <td>9669</td> <td>100.0 A/1.000 kA</td> </tr> <tr> <td>9660, 9695-03</td> <td>10.00 A/100.0 A</td> <td>CT9667 (5000A)</td> <td>500.0 A/5.000 kA</td> </tr> </tbody> </table>	Clamp Sensor	Range	Clamp Sensor	Range	9657-10, 9675	500.0 mA/5.000 A	9661, CT9667 (500A)	50.00 A/500.0 A	9694, 9695-02	5.000 A/50.000 A	9669	100.0 A/1.000 kA	9660, 9695-03	10.00 A/100.0 A	CT9667 (5000A)	500.0 A/5.000 kA
Clamp Sensor	Range	Clamp Sensor	Range														
9657-10, 9675	500.0 mA/5.000 A	9661, CT9667 (500A)	50.00 A/500.0 A														
9694, 9695-02	5.000 A/50.000 A	9669	100.0 A/1.000 kA														
9660, 9695-03	10.00 A/100.0 A	CT9667 (5000A)	500.0 A/5.000 kA														
Power Measurement Range: Depends on combination of current range and measurement line	<table border="1"> <thead> <tr> <th>500mA</th> <th>300.0W/600.0W/900.0W</th> <th>100A</th> <th>60.0kV/120.0kV/180.0kV</th> </tr> </thead> <tbody> <tr> <td>5A</td> <td>3.000kW/6.000kW/9.000kW</td> <td>500A</td> <td>300.0kW/600.0kW/900.0kW</td> </tr> <tr> <td>10A</td> <td>6.000kW/12.000kW/18.000kW</td> <td>1kA</td> <td>600.0kW/1.200MW/1.800MW</td> </tr> <tr> <td>50A</td> <td>30.000kW/60.000kW/90.000kW</td> <td>5kA</td> <td>3.000MW/6.000MW/9.000MW</td> </tr> </tbody> </table>	500mA	300.0W/600.0W/900.0W	100A	60.0kV/120.0kV/180.0kV	5A	3.000kW/6.000kW/9.000kW	500A	300.0kW/600.0kW/900.0kW	10A	6.000kW/12.000kW/18.000kW	1kA	600.0kW/1.200MW/1.800MW	50A	30.000kW/60.000kW/90.000kW	5kA	3.000MW/6.000MW/9.000MW
500mA	300.0W/600.0W/900.0W	100A	60.0kV/120.0kV/180.0kV														
5A	3.000kW/6.000kW/9.000kW	500A	300.0kW/600.0kW/900.0kW														
10A	6.000kW/12.000kW/18.000kW	1kA	600.0kW/1.200MW/1.800MW														
50A	30.000kW/60.000kW/90.000kW	5kA	3.000MW/6.000MW/9.000MW														

■ BASIC SPECIFICATIONS

Display	4.7-inch color STN LCD
Display languages	English, Japanese or Chinese (Simplified)
Display refresh rate	Approx. once per second
Clock functions	Auto calendar, auto leap year, 24-hour format
Real-Time Clock accuracy	Within 13 seconds/month
Internal Memory Capacity	4MB
Maximum recording time	125 Days
Interval Settings	AUTO, 1, 5, 15 and 30 min., and 1 hour (AUTO sequentially selects 1, 2, 10, 30 seconds, 1, 5, 15 and 30 min., and 1 hour automatically)
Demand period	15 min., 30 min. and 1 hour
Recordable Items	All parameters (incl. max/min/average values)







■ INTERFACE SPECIFICATIONS




Interface	USB 2.0 (Full Speed)
Connection destination	Computer operating on Windows 2000/ XP



■ ENVIRONMENTAL AND SAFETY-RELATED SPECIFICATIONS

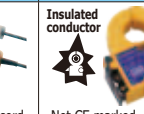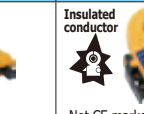Operating environment	Indoors, up to 2000 m (6562-ft.) ASL
Temperature and humidity	Storage -10 to 50°C (14 to 122°F), 80% RH or less (non-condensating) Operation 0 to 40°C (32 to 104°F), 80% RH or less (non-condensating)
Applicable standards	Safety EN61010, Pollution degree 2, Measurement Categories III (600 V) and IV (300 V) (anticipated transient overvoltage 6000 V) EMC EN61326 Class A EN61000-3-2, EN61000-3-3
Power source	AC Adapter 9418-15 or Battery Pack 9459 (Maximum rated power: 23 VA (with AC adapter))
Continuous operating time with battery pack	Approx. 6 hours (after full charge, with 5 min. auto-off LCD backlight)
Dimensions and mass	128 W × 246 H × 63 D mm (5.04"W × 9.69"H × 2.48"D) (including stand) Approx. 1.2 kg (42.3 oz.) (with battery pack)

■ CLAMP ON SENSOR SPECIFICATIONS

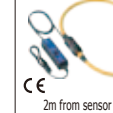MODEL	9694	9660	9661	9669	9695-02	9695-03
						
Measurable conductor diameter	φ15mm	φ15mm	φ46mm	φ55mm, 80×20mm	φ15mm	φ15mm
Primary current rating	AC 5A	AC 100A	AC 500A	AC 1000A	AC 50A	AC 100A
Output voltage	AC 10mV/A	AC 1mV/A	AC 1mV/A	AC 0.5mV/A	AC 10mV/A	AC 1mV/A
Accuracy	Amplitude (45 to 66 Hz) ±0.3%rdg.±0.02%f.s. Phase (5Hz to 5kHz) within ±2°	Amplitude (45 to 66 Hz) ±0.3%rdg.±0.02%f.s. Phase (5Hz to 5kHz) within ±1°	Amplitude (45 to 66 Hz) ±0.3%rdg.±0.01%f.s. Phase (5Hz to 5kHz) within ±0.5°	Amplitude (45 to 66 Hz) ±1.0%rdg.±0.01%f.s. Phase (5Hz to 5kHz) within ±1°	Amplitude (45 to 66 Hz) ±0.3%rdg.±0.02%f.s. Phase (5Hz to 5kHz) within ±2°	Amplitude (45 to 66 Hz) ±0.3%rdg.±0.02%f.s. Phase (5Hz to 5kHz) within ±1°
Frequency characteristic (accuracy deviation)	within ±1.0% at 40Hz to 5kHz (9669: within ±2.0%)				within ±1.0% at 40Hz to 5kHz	
Max. rated voltage to earth	300Vrms (CAT III)	300Vrms (CAT III)	600Vrms (CAT III)	600Vrms (CAT III)	300Vrms (CAT III)	
Maximum allowable input (45 to 66 Hz)	50A continuous	130A continuous	550A continuous	1000A continuous	60A continuous	130A continuous
Dimensions and weight	46W×135H×21Dmm, 230g	46W×135H×21Dmm, 230g	77W×151H×42Dmm, 360g	100W×188H×42Dmm, 590g	51W×58H×19Dmm, 50g	
Requirements					Connection Cord 9219 (3m; Option)	

MODEL	CT9667-01	CT9667-02	CT9667-03
			
Measurable conductor diameter	φ100mm	φ180mm	φ254mm
Primary current rating	AC 500A/5000A		
Output voltage	AC 500mVf.s.		
Accuracy	Amplitude (45 to 66 Hz) ±2.0%rdg.±3.0%f.s. Phase within ±1°		
Frequency characteristic (accuracy deviation)	±3dB at 10Hz to 20kHz		
Max. rated voltage to earth	1000Vrms (CAT III)		
Maximum allowable input (45 to 66 Hz)	10000A continuous		
Dimensions	Sensor cable diameter φ7.4 mm(0.29")	Sensor cable diameter φ13 mm(0.51")	
Weight	Circuit box 35W×120H×34Dmm, 280 g		140g
Requirements	AC Adapter 9445-02(Option, for UL type), 9445-03 (Option, for EU type)		

MODEL	9675	9657-10
		
Measurable conductor diameter	φ30mm	φ40mm
Primary current rating	AC 10A	AC 10A
Output voltage	AC 100mV/A	AC 100mV/A
Amplitude Accuracy (45 to 66 Hz)	±1.0%rdg.±0.005%f.s.	±1.0%rdg.±0.05%f.s.
Phase Accuracy (50/60Hz)	within ±5°	within ±3°
Residual Current	1mA (10A on forward and return)	5mA (100A on forward and return)
Frequency characteristic (accuracy deviation)	within ±5% at 40Hz to 5kHz	within ±3% at 40Hz to 5kHz
Measurable conductor	insulated conductor	
Maximum allowable input	10A continuous	30A continuous
Dimensions and weight	60W×113H×24Dmm, 160g	74W×145H×42Dmm, 380g
Notes	Not compatible with power measurements	

■ 3197 STANDARD BUNDLE CONFIGURATION

Includes all the equipment you need to measure voltage.
For current or power measurements, please select from our wide assortment of clamp on sensors.

VOLTAGE CORD L9438-55 (3m cord length), BATTERY PACK 9459, AC ADAPTER 9418-15, USB Cable, Input Terminal Labels, Input Cord Labels, 3197 Applications PC Program (CD-ROM), strap, carrying case, measurement guide, instruction manual

■ OPTION PQA-HiVIEW Pro PC Application Software 9624-50

■ SUGGESTED OPTIONS for POWER MEASUREMENTS

3P4W Circuit testing of motors and breakers:
3197 Standard Package + 9661 (500A Sensor)×3

3P4W Circuit testing of external CTs:
3197 Standard Package + 9694 (5A Sensor)×3

3P Leakage testing:
3197 Standard Package + 9675 (10A Sensor)×3

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.